

Float Switch Configuration:

Pump-Up Mode

In a pump-up mode, the R2 relay will initiate by switching the pump when the fluid level in the tank falls below the lower tank level switch point. The R2 relay will remain energized (latched) and the pump will continue to operate until fluid fills the tank up to the high level switch point. When the fluid reaches the high level switch point, the control relay will de-energize and shut off the pump. The R2 relay will remain de-energized until the fluid falls below the tank's low level switch point.

Pump-Down Mode


In a pump-down mode, the R2 relay will initiate by switching on the pump when the fluid level in the tank reaches the upper tank level switch point. The R2 relay will remain energized (latched) and the pump will continue to operate until fluid in the tank empties down to the low level switch point. When the fluid falls below the low level switch point the R2 relay will de-energize and shut off the pump. The R2 relay will remain de-energized until the fluid reaches the tank's high level switch point.

Pump-Up

- Set both float switches "Normally Closed".
- Connect Upper float switch to pins 5 and 6, Lower float switch to pins 5 and 8.
- Jumper supply voltage from terminal 2 to terminal 1.
- Connect one end of the pump / valve to terminal 3 and other end to terminal 7.
- Connect input power to terminals 2 and 7.

Pump-Down

- Set both float switches "Normally Open".
- Connect Upper float switch to pins 5 and 8, Lower float switch to pins 5 and 6.
- Jumper supply voltage from terminal 2 to terminal 1.
- Connect one end of the pump / valve to terminal 3 and other end to terminal 7.
- Connect input power to terminals 2 and 7.

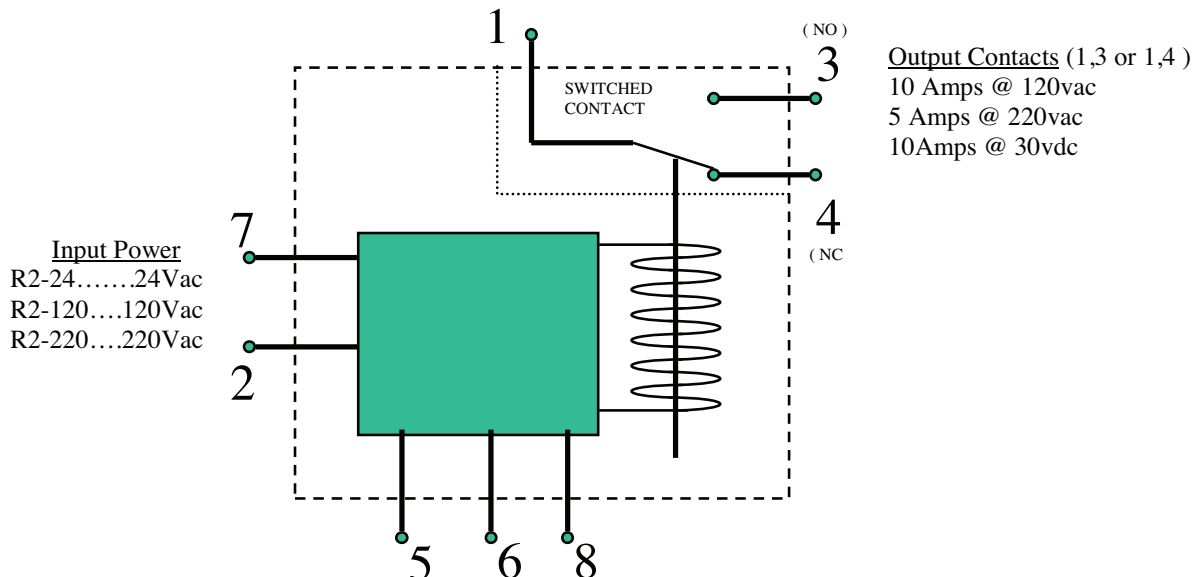



Sensing Solutions since 1959

Installation and Maintenance R2 Controller


Conductivity Sensor Configuration

- Input power is connected between pins 2 and 7
- Wire the "Common Probe" to pin 5
- Wire the "Lower Probe" to pin 6
- Wire the "Upper Probe" to pin 8

Pins 1-3 and 1-4 are isolated switched contacts to switch power to a valve or pump

Features

- Dual probe level detection
- Solid state circuitry, coated for moisture protection
- Factory-fixed or adjustable sense resistance
- UL and CSA approvals
- Electromechanical relay output for isolation and reliability

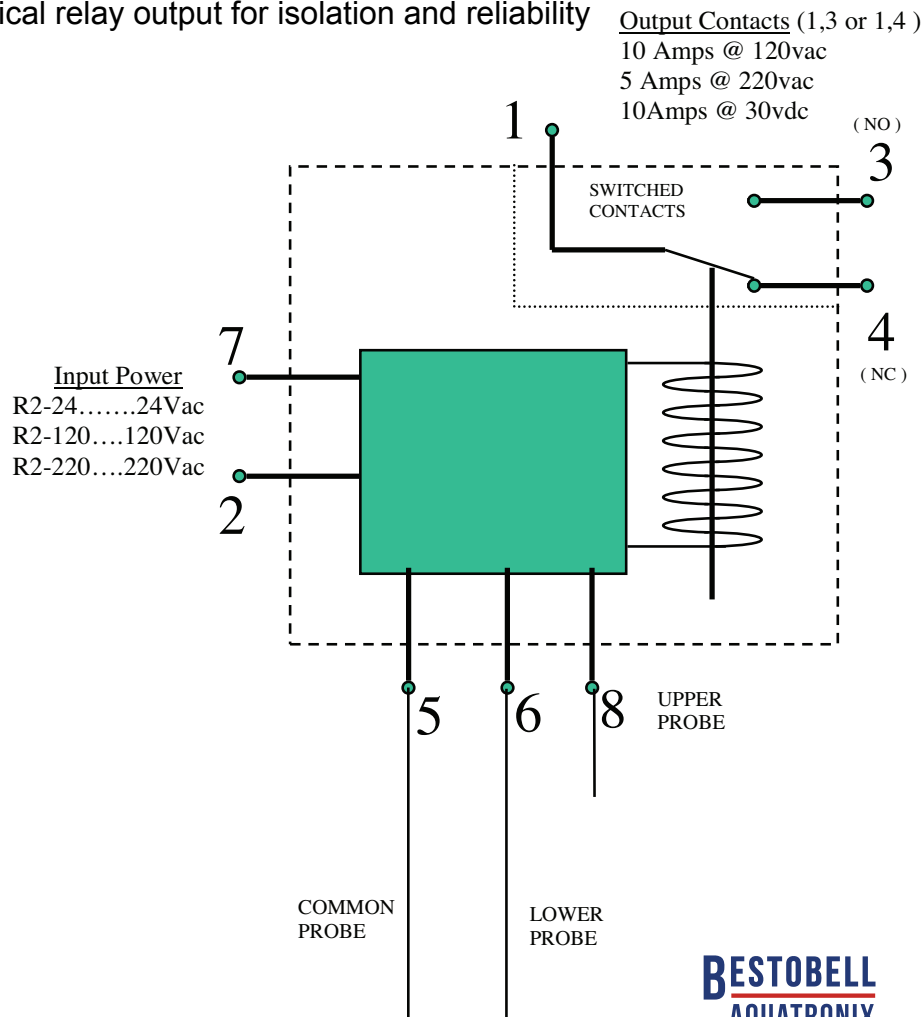

Madison Company, Inc.
27 Business Park Drive
Branford, CT 06405

ISO 9001 Certified

© 2018 Madison Company, Inc., MAD_MAN_MF-044_060518
ECR #10900, Effective Date 8/2018, MF-044, Rev G

BESTOBELL
AQUATRONIX
SINCE DEPUIS 1953

Head Office
2880 Argentia Road, Unit 3
Mississauga, ON L5N 7X8
salesdesk@bestobell.com
1-800-668-3979
www.bestobell.com

Since 1953, Quality Products to Sense, Measure & Control
Depuis 1953, Produits De Qualités Pour Détecter, Mesurer & Contrôler

Montréal Office
970 Montée de Liesse, #204
St.Laurent, QC H4T 1W7
ventes@bestobell.com
1-877-331-1225

Atlantic Office
166 North Side Road
Riverport, NS B0J 2W0
dmossman@bestobell.com
902-529-0355

MADE IN THE USA